



NATIONAL INTERAGENCY INCIDENT COMMUNICATIONS DIVISION
DPH KING RADIO QUICK PROGRAM GUIDE

1. Select a group and channel needed to program.

Select a group by pressing the "#" key followed by a 2-digit group number and press the "ENT" key.

2. Program Access

- Insert programming plug into radio side connector.
- Press and hold the master switch on plug.
- While pressing the master switch, press and hold the "FCN" key for about 3 secs.
- LCD should display "-- --ID". (Note: NIFC radio password is "000000")
- Enter the SIX-DIGIT password and press the "ENT" key to enter program mode.
- If the correct password was entered, the LCD will display "IRG CH 00".

3. Programming a Channel (ANALOG ONLY)

Once in the Program Mode, press a 2-digit channel number to program with the keypad.

- "IRG CH 01".....Channel 01 Settings is currently selected.
- "IRG CH 01N".....Press # to toggle between Narrow/Wide Band and press the "FCN" key.
- "IRG RX 170.47500".....Press "CLR" and enter new RX Frequency and press the "ENT" key.
- "IRG RX MODE-A".....Change RX Mode with "PRI" key to "A" for Analog and press the "ENT" key.
- "IRG RX CG 000.0".....Press "CLR" and enter new RX Code Guard and press "ENT" key.
- "IRG RX IDCG" NAC0659".....RX NAC, DIGITAL ONLY, press the "ENT" key to skip to next field.
- "IRG RX ID SQL-NRM".....Change "Squelch" with "PRI" key to "NRM" and press the "ENT" key.
- "IRG TX 170.47500".....Press "CLR" and enter new TX Frequency and press the "ENT" key.
- "IRG TX MODE-A".....Change TX Mode with "PRI" key to "A" for Analog and press the "ENT" key.
- "IRG TX CG 103.5".....Press "CLR" and enter new TX Code Guard and press the "ENT" key.
- "IRG TX IDCG" NAC0659".....TX NAC, DIGITAL ONLY, press the "ENT" key to skip to next field.
- "IRG ID TG00001".....Talk Group ID, DIGITAL ONLY, press the "ENT" key to skip to next field.
- "IRG CHAN 1".....Channel Label, press "ENT" to bring up the first programming field (IRG CH 01N).

4. Channel Programming is complete. At this point the user may select another channel to program or exit the program mode by cycling power to the radio.

DPH Version 3.0/October, 2007

DPH SETTINGS & OPTIONS	DPH CH 00 Program Guide
ADD Channel to Scan List Select CH with CH knob and press the "ENT" key. "SCN" will appear in upper display.	"P000000".....Group Password Assignment "0000000".....Group ANI/DTMF ID "120 SEC".....Transmit Time-Out Timer "2.0SEC".....Scan Delay Time
DELETE Channel from Scan List Select CH with CH knob and press the "CLR" key. "SCN" will be removed from the upper display. <i>Note: Scan must be disabled to add/delete CH's from scan list.</i>	"PR1 OFF".....Priority 1 Channel Assignment "PR2 OFF".....Priority 2 Channel Assignment Group 1: (NIFC Default is 1-12345) Battery Saver Disabled.....1-12345 Group Scan.....1-12345 TX ON PRI 1.....1-12345 Priority Key Lockout.....1-12345 Scan List Lockout.....1-12345
ADD PRI Scan Channel Select CH, Press "PRI" key, PRI will appear in display. <i>Priority Mode B, C or D must be enabled to change PRI Channel via the keypad.</i> <i>Note: See DPH Help Files for more information.</i>	Group 2: (NIFC Default is 2-12345) User Code Guard Enabled.....2-12345 Busy Channel Indicator Enabled.....2-12345 Busy Channel Lockout Enabled.....2-12345 Busy Channel Lockout/Override.....2-12345 ANI Enabled.....2-12345 Manual DTMF Encoder.....2-12345 Manual DTMF/ANI Encoder.....2-12345
Changing Groups <i>See Step 1 on front page.</i>	Group 3: (NIFC Default is 3-12345) Reserved.....3-12345 Reserved.....3-12345 LCD Backlight ON Display Change.....3-12345 LCD Backlight ON Key Press.....3-12345 Alphanumeric Mode Enabled.....3-12345 "LITE OFF".....Back Light Duration "GROUP XX".....Group Label
HI/LOW Power Selection Select LO Power by toggling the LO/HI Switch to the up position. (Toward the back of the radio) Select HI Power by toggling the LO/HI Switch to the down position. (Toward the front of the radio)	
TX User Selectable Tones To Enable Tone, press number on keypad so select. To Disable Tone, press the number "0" on keypad.	
Disable/Enable Keypad To Disable, press and hold "FCN" key. To Enable, press and hold "FCN" key.	

Bold= Flashing



NATIONAL INTERAGENCY INCIDENT COMMUNICATIONS DIVISION
DPH KING RADIO QUICK PROGRAM GUIDE

1. Select a group and channel needed to program.

Select a group by pressing the "#" key followed by a 2-digit group number and press the "ENT" key.

2. Program Access

- Insert programming plug into radio side connector.
- Press and hold the master switch on plug.
- While pressing the master switch, press and hold the "FCN" key for about 3 secs.
- LCD should display "-- --ID". (Note: NIFC radio password is "000000")
- Enter the SIX-DIGIT password and press the "ENT" key to enter program mode.
- If the correct password was entered, the LCD will display "IRG CH 00".

3. Programming a Channel (ANALOG ONLY)

Once in the Program Mode, press a 2-digit channel number to program with the keypad.

- "IRG CH 01".....Channel 01 Settings is currently selected.
- "IRG CH 01N".....Press # to toggle between Narrow/Wide Band and press the "FCN" key.
- "IRG RX 170.47500".....Press "CLR" and enter new RX Frequency and press the "ENT" key.
- "IRG RX MODE-A".....Change RX Mode with "PRI" key to "A" for Analog and press the "ENT" key.
- "IRG RX CG 000.0".....Press "CLR" and enter new RX Code Guard and press "ENT" key.
- "IRG RX IDCG" NAC0659".....RX NAC, DIGITAL ONLY, press the "ENT" key to skip to next field.
- "IRG RX ID SQL-NRM".....Change "Squelch" with "PRI" key to "NRM" and press the "ENT" key.
- "IRG TX 170.47500".....Press "CLR" and enter new TX Frequency and press the "ENT" key.
- "IRG TX MODE-A".....Change TX Mode with "PRI" key to "A" for Analog and press the "ENT" key.
- "IRG TX CG 103.5".....Press "CLR" and enter new TX Code Guard and press the "ENT" key.
- "IRG TX IDCG" NAC0659".....TX NAC, DIGITAL ONLY, press the "ENT" key to skip to next field.
- "IRG ID TG00001".....Talk Group ID, DIGITAL ONLY, press the "ENT" key to skip to next field.
- "IRG CHAN 1".....Channel Label, press "ENT" to bring up the first programming field (IRG CH 01N).

4. Channel Programming is complete. At this point the user may select another channel to program or exit the program mode by cycling power to the radio.

DPH Version 3.0/October, 2007

DPH SETTINGS & OPTIONS	DPH CH 00 Program Guide
ADD Channel to Scan List Select CH with CH knob and press the "ENT" key. "SCN" will appear in upper display.	"P000000".....Group Password Assignment "0000000".....Group ANI/DTMF ID "120 SEC".....Transmit Time-Out Timer "2.0SEC".....Scan Delay Time
DELETE Channel from Scan List Select CH with CH knob and press the "CLR" key. "SCN" will be removed from the upper display. <i>Note: Scan must be disabled to add/delete CH's from scan list.</i>	"PR1 OFF".....Priority 1 Channel Assignment "PR2 OFF".....Priority 2 Channel Assignment Group 1: (NIFC Default is 1-12345) Battery Saver Disabled.....1-12345 Group Scan.....1-12345 TX ON PRI 1.....1-12345 Priority Key Lockout.....1-12345 Scan List Lockout.....1-12345
ADD PRI Scan Channel Select CH, Press "PRI" key, PRI will appear in display. <i>Priority Mode B, C or D must be enabled to change PRI Channel via the keypad.</i> <i>Note: See DPH Help Files for more information.</i>	Group 2: (NIFC Default is 2-12345) User Code Guard Enabled.....2-12345 Busy Channel Indicator Enabled.....2-12345 Busy Channel Lockout Enabled.....2-12345 Busy Channel Lockout/Override.....2-12345 ANI Enabled.....2-12345 Manual DTMF Encoder.....2-12345 Manual DTMF/ANI Encoder.....2-12345
Changing Groups <i>See Step 1 on front page.</i>	Group 3: (NIFC Default is 3-12345) Reserved.....3-12345 Reserved.....3-12345 LCD Backlight ON Display Change.....3-12345 LCD Backlight ON Key Press.....3-12345 Alphanumeric Mode Enabled.....3-12345 "LITE OFF".....Back Light Duration "GROUP XX".....Group Label
HI/LOW Power Selection Select LO Power by toggling the LO/HI Switch to the up position. (Toward the back of the radio) Select HI Power by toggling the LO/HI Switch to the down position. (Toward the front of the radio)	
TX User Selectable Tones To Enable Tone, press number on keypad so select. To Disable Tone, press the number "0" on keypad.	
Disable/Enable Keypad To Disable, press and hold "FCN" key. To Enable, press and hold "FCN" key.	

Bold= Flashing